

# ISTAIR INSTALLATION DETAILS

FASTEN TOP RISER TO SUBFLOOR  
HEADER JOIST (HEADER JOIST DESIGNED BY OTHER)  
WITH (4) 8 x 2 1/2" SCREWS OR (4) 8d NAILS.

3/4" APA STRUCTURAL 1  
RATED OSB SHEATHING



FASTENERS TO TOP PLATE  
OR BALLOON FRAMING  
SPACED 12" MAX FROM  
HEADER JOIST.

2 x 4 SPF #2 OR BETTER  
STRINGER FASTENED TO  
STUDS - SEE TABLE 1  
FOR FASTENER INFO.

RECOMMENDED : USE SUBFLOOR  
CONSTRUCTION ADHESIVE TO GLUE  
ALL STRINGERS TO STUD CONNECTIONS  
AND BOTTOM RISER TO FLOOR OR LANDINGS.

SUPPORT STRINGERS &  
RISER ON FLOOR OR LANDING

2 X 4 SPF #2  
24" O.C. MAX

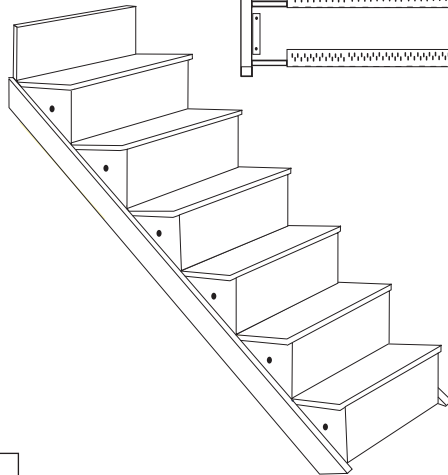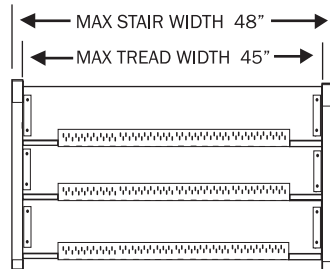

ALL CONSTRUCTION SHALL FOLLOW  
APPLICABLE BUILDING CODES